

Installation Manual

Premier LCDP/LCDLP

INS230-3



Texecom
Designed to Perform

1. Introduction

The *Premier LCDP* keypad is only compatible with the *Premier* range of control panels.

Any combination of *Premier LCD*, *LCDL*, *LCDP* and *LCDLP* keypads can be used. Keypads can be connected serially (daisy chain), in parallel (star) or any combination of the two, see control panel installation manual or INS180 for installation details.

Although the *Premier LCDP* and *LCDLP* keypads can be used with all premier series control panels, it is not fully supported on some control panels, see below for details.

Control Panel	Version	Fully Supported
<i>Premier 412 & 816</i>	Versions 1.X - 4.X	CANNOT BE USED!
<i>Premier 412 &, 816</i>	Versions 5.X - 7.X	No
<i>Premier 412 &, 816</i>	Versions 8.X and above	No
<i>Premier 8SP & 832</i>	All Versions	No
<i>Premier 88 & 168</i>	Versions 1.X - 3.X	No
<i>Premier 88 & 168</i>	Version 4.X and above	Yes
<i>Premier 24 & 48</i>	All Versions	Yes
<i>Premier 640</i>	All Versions	Yes

UL/CUL Requirements

Only the following keypads may be used in a UL/CUL installation

Model No	Product Description
DBD-0135	Premier LCDL-P UL/CUL
DBD-0133	Premier Elite FMK Polished Chrome UL/CUL
DBD-0144	Premier Elite FMK Polished Brass UL/CUL
DBD-0143	Premier Elite FMK Satin Chrome UL/CUL
DBD-0148	Premier Elite FMK Diamond Black UL/CUL
DBD-0147	Premier Elite FMK Gunmetal UL/CUL
DBD-0134	Premier Elite SMK Polished Chrome UL/CUL
DBD-0161	Premier Elite SMK Polished Brass UL/CUL
DBD-0160	Premier Elite SMK Satin Chrome UL/CUL
DBD-0150	Premier Elite SMK Diamond Black UL/CUL
DBD-0149	Premier Elite SMK Gunmetal UL/CUL

General Operation

1. A Proximity TAG must be held over the **PROX** symbol on the keypad.
2. A Proximity TAG will normally work at distances of up to 4cm, however it should be noted that distances can and do vary.
3. Presenting a Proximity TAG to the keypad is NO different to entering a code except that it is a SINGLE action as apposed to a MULTIPLE action.
4. The control panel will log which User/TAG has been presented.

Programming Proximity TAGS


Programming a Proximity TAG will depend on which type of control panel and what version of software is installed (this can normally be obtained from the sticker on the Microprocessor or by viewing the 'Version No' in the relevant control panel menu).

The type of control panel/version of software should be noted and the box at the top of the relevant page should be ticked to indicate the correct method of programming.

The indicated method of programming should always be used when assigning new or additional TAGS to the system.

Operation


Determine your Panel Type

From Day Mode press  followed by 4, the keypad will display the Model and software version. Note which Model you have and proceed as follows:-

Programming

Premier 24,48,88,168 & 640

To assign a Proximity TAG to a User, proceed as follows:

1. **Program the User code as normal**, this new option will now appear at the end :- 'Do you want to Add TAG to User?'
2. **Press** 
3. **Present the Proximity TAG to the keypad within 10 seconds**
4. A confirmation tone will be heard, the TAG is now programmed.

Premier 412, 816 & 832

To assign a Proximity TAG to a User, proceed as follows:

1. **Program a User code or use an existing User code**
2. **Press** **Yes** and **Area** together, 'TAG Programming. TAG No.>-----' will now appear
3. **Enter the CODE of the User that you want to assign a TAG to**
? **?** **?** **?** and press **Yes**
4. **Present the Proximity TAG to the keypad within 10 seconds**
5. A confirmation tone will be heard, the TAG is now programmed.

Arming

Premier 24,48,88,168 & 640

To Arm the Control Panel, proceed as follows:

1. **Present the TAG to the keypad**, the display will show 'Do You Want To Arm System?
2. **Present the TAG again** (or hold it in place) and the exit will start, leave the building

Note:- If Quickarm is enabled the system will start the exit time immediately.

Arming Premier 412, 816 & 832

To Arm the Control Panel, proceed as follows:

1. **Present the Proximity TAG to the keypad** (the display will show 'Do You Want To Arm System?')
2. **Press** **Yes** and the exit will start, leave the building

Note:- If Quickarm is enabled the system will start the exit time immediately.

 
 
 
 
 
 
 
 
 
Disarming

To Disarm the Control Panel, proceed as follows:















1. **Enter the building Via the designated Entry point** (the entry tone will sound)
2. **Present the TAG to the keypad**, the entry tone will stop, the alarm is now disarmed

2. Icon Guide

LED's



Keys

              

Texecom

Designed to Perform